


HP UPS T750

User Guide

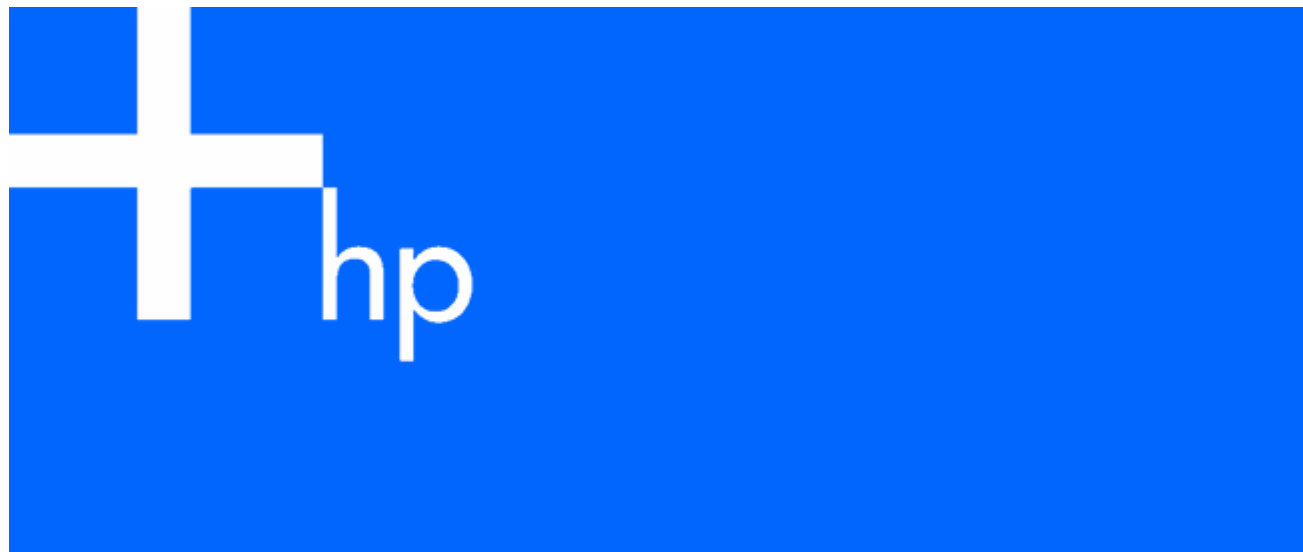

March 2006 (Third Edition)
Part Number 382249-003



© Copyright 2004, 2006 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation.

March 2006 (Third Edition)

Part Number 382249-003

Audience assumptions

This guide is for the person who operates, configures, maintains, and troubleshoots UPSs. HP assumes you are qualified in the servicing of high-voltage equipment and trained in recognizing hazards in products with hazardous energy levels.

Contents

Component identification	5
UPS front panel	5
UPS front panel controls and LED indicators	6
UPS T750 NA/JPN rear panel	7
UPS T750 INTL rear panel	8
Installation	9
Precautions	9
Electrical requirements	9
Checking the battery recharge date	9
Connecting the batteries	10
Selecting the UPS voltage configuration	11
Connecting the host computer	12
Connecting the serial communications port	12
Connecting the USB communications port	13
Connecting the Network Transient Protectors	13
Connecting the UPS to utility power	13
Connecting devices to the UPS	14
Charging the UPS batteries	14
Powering up the UPS	15
UPS operations	16
Initiating a self-test	16
Silencing an audible alarm	16
Audible alarm conditions	16
Powering down the UPS	16
Power management	18
HP Power Manager features	18
Maintenance	19
Updating the UPS firmware	19
Cleaning battery spills	19
Troubleshooting	20
UPS does not start	20
Audible alarm sounds	20
UPS operates on battery only	20
UPS frequently switches between utility and battery power	21
UPS does not provide the expected backup time	21
UPS emits a slight clicking noise	21
Power LED flashes	21
Voltage Configuration LED is green	21
Output Load Level LED is red or flashing red	22
Battery Charge LED is red	22
Battery Warning LED is amber	22
Site Wiring Fault LED is red	22
Specifications	23
UPS physical specifications	23
UPS input specifications	23
UPS output specifications	23


Power protection specifications	23
Voltage specifications	24
Output tolerance specifications.....	24
Output feature specifications	24
Battery specifications	24
Battery runtime.....	25
Environmental specifications	25
Spares.....	26
Ordering spares.....	26
UPS spare parts list.....	26
Hardware options	26
Technical support.....	27
Before you contact HP	27
HP contact information.....	27
Warranty information.....	28
Limited warranty	28
\$250,000 Computer Load Protection Guarantee.....	28
Pre-Failure Battery Warranty	28
Regulatory compliance notices	30
Regulatory compliance identification numbers	30
Federal Communications Commission notice.....	30
FCC rating label.....	30
Class A equipment.....	31
Class B equipment.....	31
Declaration of conformity for products marked with the FCC logo, United States only.....	31
Modifications.....	32
Cables.....	32
Canadian notice (Avis Canadien).....	32
European Union regulatory notice	32
Japanese notice	33
BSMI notice	33
Korean notice	33
Battery replacement notice.....	34
Power cord statement for Japan.....	34
Electrostatic discharge.....	35
Preventing electrostatic discharge	35
Grounding methods to prevent electrostatic discharge.....	35
Acronyms and abbreviations.....	36
Index.....	37

Component identification

In this section


UPS front panel.....	5
UPS front panel controls and LED indicators.....	6
UPS T750 NA/JPN rear panel.....	7
UPS T750 INTL rear panel.....	8

UPS front panel

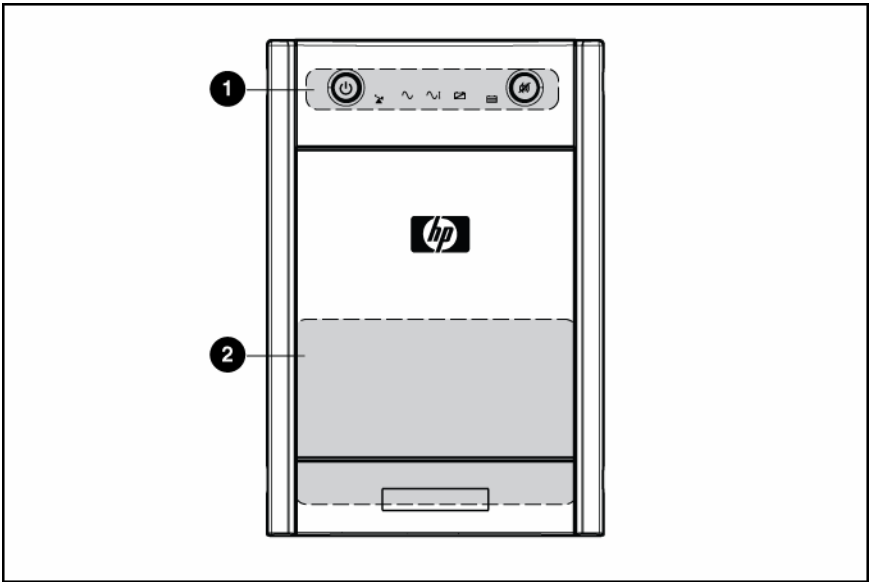


Item	Description
1	Control buttons and LED display
2	Battery compartment

UPS front panel controls and LED indicators

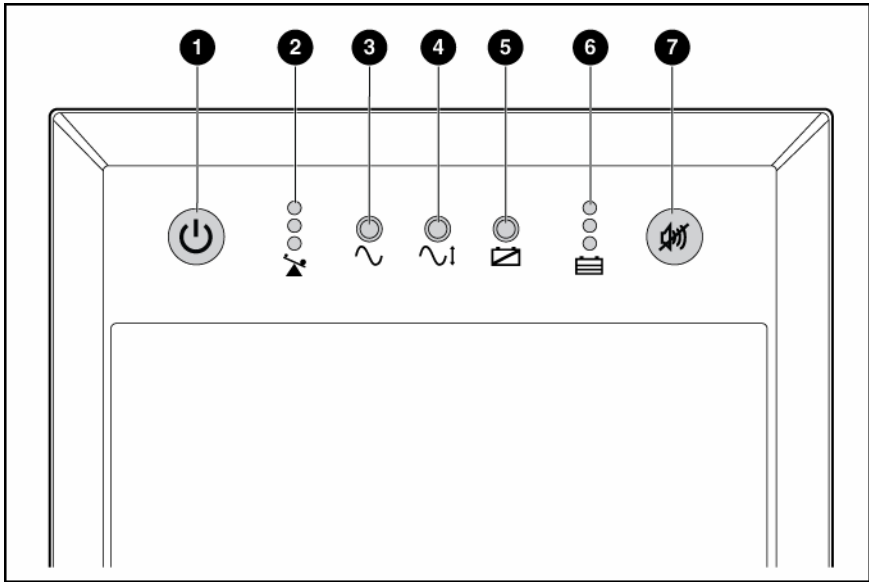


Item	Description	Function
1	Power On/Standby button	Turns the UPS power on and off, and places the UPS in Standby mode. ¹
2	Output Load Level LED	Shows approximately how much of the UPS power capacity is used to support the equipment connected to the output receptacles. Red—Maximum load Amber—Medium load Green—Light load
3	Power LED	Green—The UPS is on and supplying connected equipment with AC power. Flashing green—The UPS is operating from its internal batteries during a blackout or severe brownout. If the blackout or brownout is prolonged, save any open files and shut down the connected equipment.
4	Voltage Correction LED	Green—The UPS is automatically correcting high or low AC voltage on the utility line without the assistance of battery power. The UPS will emit a slight clicking noise.
5	Battery Warning LED	Amber—During a self-test, the UPS found that the batteries must be recharged. Charge the batteries and repeat the self-test (" Initiating a self-test " on page 16).

Item	Description	Function
6	Battery Charge LED	<p>When the UPS is operating from utility power (the Power LED is green), the Battery Charge LED indicates the approximate charge state of the batteries:</p> <p>Red—The batteries are beginning to charge.</p> <p>Amber—The batteries are midway through charging.</p> <p>Green—The batteries are fully charged.</p> <p>When the UPS is operating on battery power during a blackout or severe brownout (the Power LED is flashing green), the Battery Charge LED indicates the approximate amount of remaining battery energy:</p> <p>Red—The batteries have a low level of energy.</p> <p>Amber—The batteries have a medium amount of energy.</p> <p>Green—The batteries have a high amount of energy.</p> <p>Periodically initiate a self-test ("Initiating a self-test" on page 16) to determine the energy level of the batteries before a blackout or brownout occurs.</p>
7	Mute/Test button	Silences UPS alarms and initiates a self-test (" Initiating a self-test " on page 16).

-  **IMPORTANT:** While in Standby mode, the UPS maintains the charge on the batteries, but no power is available at the output receptacles. The UPS remains in Standby mode until an alternate mode is selected or until utility power is removed.


UPS T750 NA/JPN rear panel

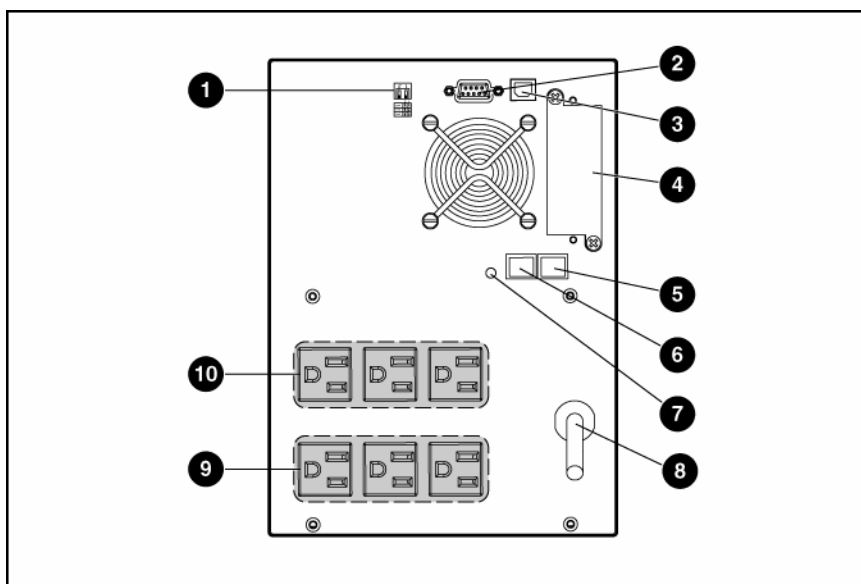

Item	Description
1	Voltage configuration DIP switches
2	Serial communications port
3	USB communications port
4	Option slot
5	Network Transient Protector IN jack

Item	Description
6	Network Transient Protector OUT jack
7	Site Wiring Fault LED
8	Input power cord with NEMA 5-15 plug
9	Three NEMA 5-15 output receptacles for surge-only protection
10	Three NEMA 5-15 output receptacles for surge and battery backup protection

UPS T750 INTL rear panel

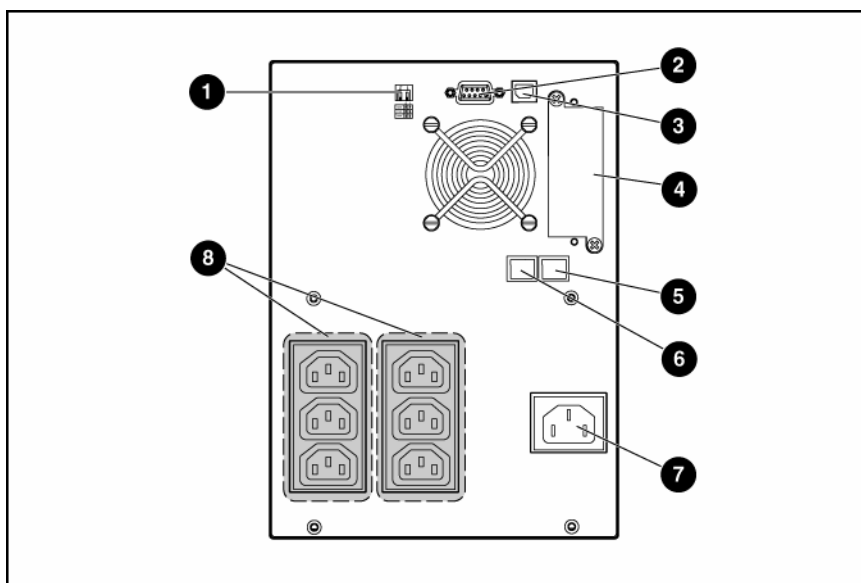

Item	Description
1	Voltage configuration DIP switches
2	Serial communications port
3	USB communications port
4	Option slot
5	Network Transient Protector IN jack
6	Network Transient Protector OUT jack
7	Input power receptacle (IEC-320-C14) for country-specific plug attachment
8	Six IEC-320-C13 output receptacles for surge and battery backup protection




Installation

In this section


Precautions	9
Electrical requirements	9
Checking the battery recharge date.....	9
Connecting the batteries.....	10
Selecting the UPS voltage configuration	11
Connecting the host computer.....	12
Connecting the Network Transient Protectors	13
Connecting the UPS to utility power.....	13
Connecting devices to the UPS.....	14
Charging the UPS batteries.....	14
Powering up the UPS	15

Precautions

Save these instructions. This document contains important safety instructions that should be followed during installation, operation, and maintenance of the UPS and batteries.

-  **WARNING: A risk of personal injury from electric shock and hazardous energy levels exists. The installation of options and routine maintenance and service of this product must be performed by individuals who are knowledgeable about the procedures, precautions, and hazards associated with AC power products.**
-  **WARNING: To prevent personal injury from earth conductor leakage current:**
 - **Do not operate the UPS while disconnected from the utility power source.**
 - **Disconnect load devices before disconnecting the UPS from the utility power source.**
-  **WARNING: To prevent personal injury, prepare the area and observe all materials handling procedures when transporting the UPS. When fully assembled, the UPS weighs 13.6 kg (30 lb).**

Electrical requirements

-  **WARNING: To prevent fire or electric shock, install the unit in a temperature- and humidity-controlled indoor environment, free of conductive contaminants.**

Checking the battery recharge date

Before unpacking the UPS, check the date on the battery recharge date label that is affixed to the shipping carton.



IMPORTANT: Do not use the battery if the recharge date has passed. If the date on the battery recharge date label has passed without the battery being recharged, contact an HP authorized service representative for directions.

Connecting the batteries



WARNING: The unit contains sealed lead-acid battery modules. To prevent fire or chemical burns:

- Do not attempt to recharge batteries after removal from the unit.
- Do not disassemble, crush, or puncture the batteries.
- Do not short the external contacts of the batteries.
- Do not immerse the batteries in water.
- Do not expose to temperatures higher than 40°C (104°F).




WARNING: To prevent personal injury from hazardous energy:

- Remove watches, rings, or other metal objects.
- Use tools with insulated handles.
- Do not place tools or metal parts on top of batteries.




IMPORTANT: Before performing the following tasks, be sure that the unit is powered down and disconnected from the utility power source.

1. Remove the UPS front bezel.

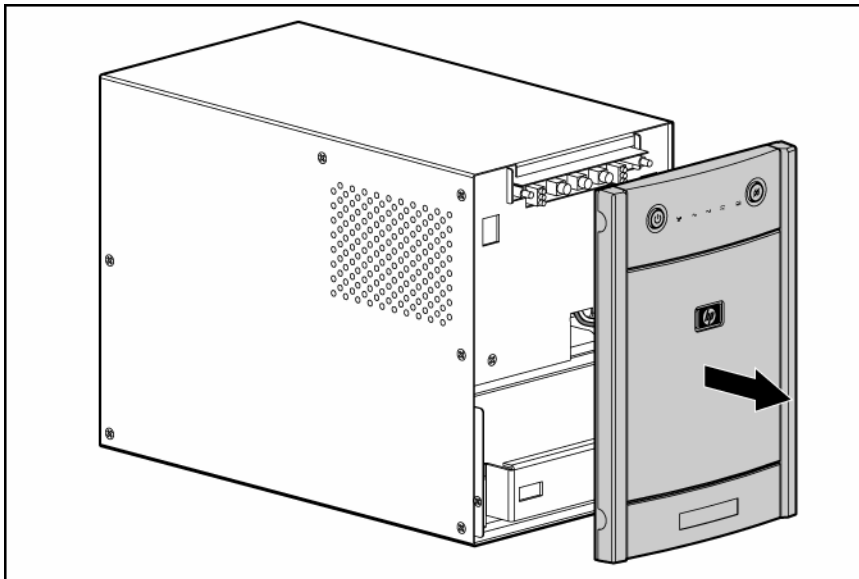

2. Connect the negative (black) lead to the negative battery terminal.

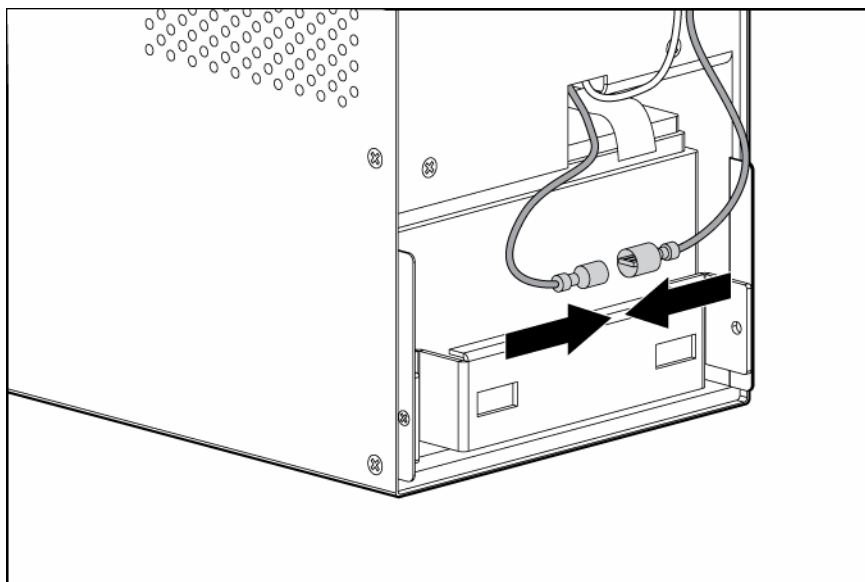


NOTE: A small amount of arcing may occur when connecting the batteries. This is normal and does not damage the unit or present any safety concern.

3. Replace the UPS front bezel.

Selecting the UPS voltage configuration

Using a small tool, position the DIP switches according to the desired voltage configuration as identified on the rear panel of the UPS and in the following table.

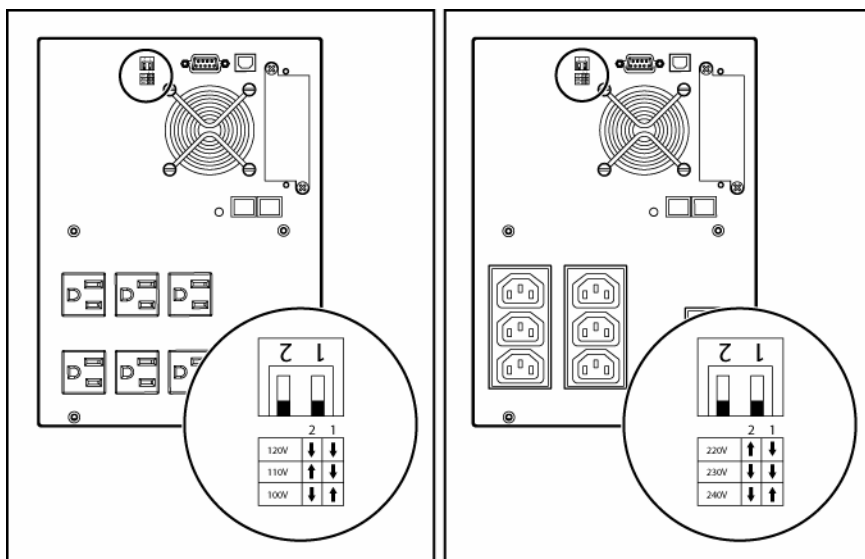

NOTE: An asterisk (*) indicates the default setting.

	Output voltage	Input voltage range	DIP switch 2	DIP switch 1
T750 NA/JPN	100 V	90–106 V	Down	Up
	110 V	99–116 V	Up	Down
	120 V	108–127 V	Up	Up

	Output voltage	Input voltage range	DIP switch 2	DIP switch 1
	120 V*	108–127 V	Down	Down
T750 INTL	220 V	198–233 V	Up	Down
	230 V	207–243 V	Up	Up
	230 V*	207–243 V	Down	Down
	240 V	216–254 V	Down	Up


Connecting the host computer

CAUTION: Use only the computer interface cable supplied with the UPS to connect the communications port to the host computer.


Connect the UPS to a host computer using either the USB cable or the DB9 serial cable included with the UPS. Install HP Power Manager software 4.0 or later on the host computer. See the HP website (<http://www.hp.com/go/rackandpower>) to download the latest version of HP Power Manager.

NOTE: To install and configure the software, see the software user guide. The software user guide is available for download from the HP website (<http://www.hp.com/go/rackandpower>).

Connecting the serial communications port

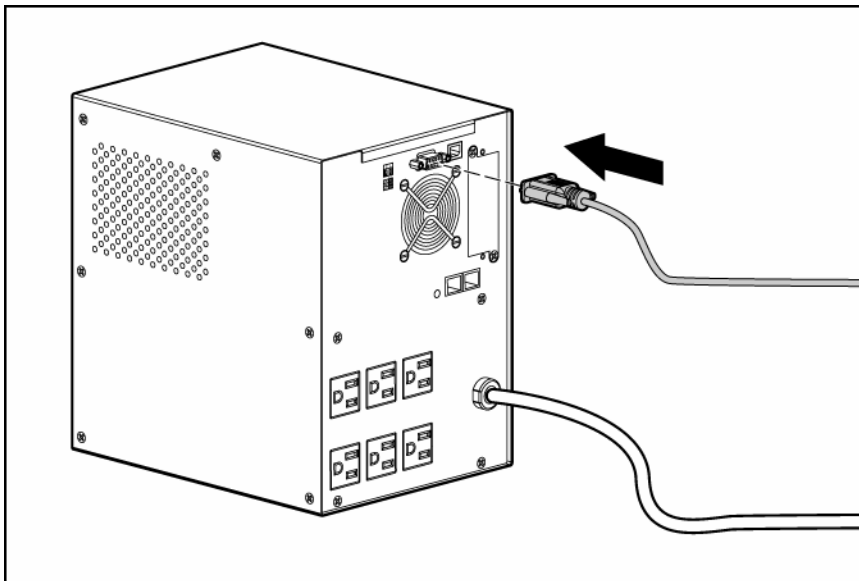

Connecting the USB communications port

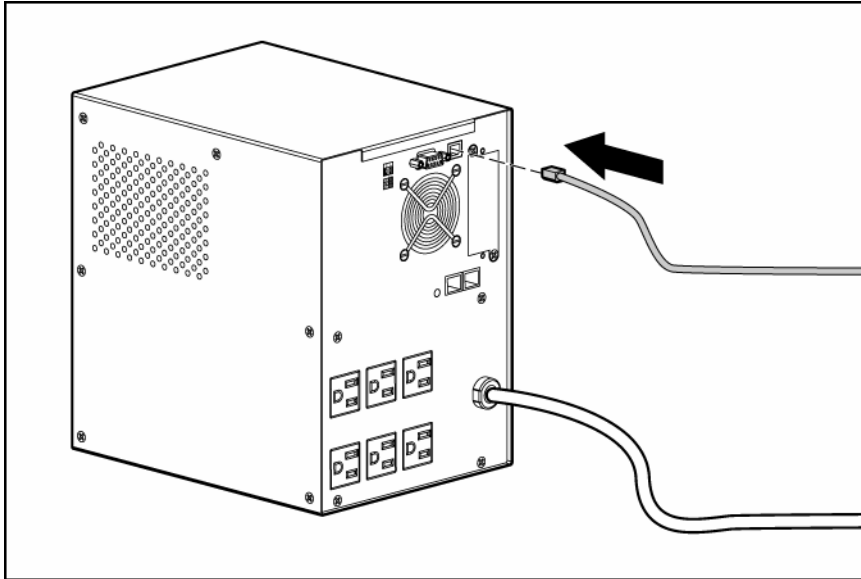


Connecting the Network Transient Protectors

⚠ CAUTION: To avoid damaging the equipment, use the Network Transient Protector with a standard telephone line only, not with a digital PBX.

To protect equipment against surges over a network data line:

1. Connect the network wall jack to the UPS Network Transient Protector IN jack.
2. Connect the equipment to the UPS Network Transient Protector OUT jack.

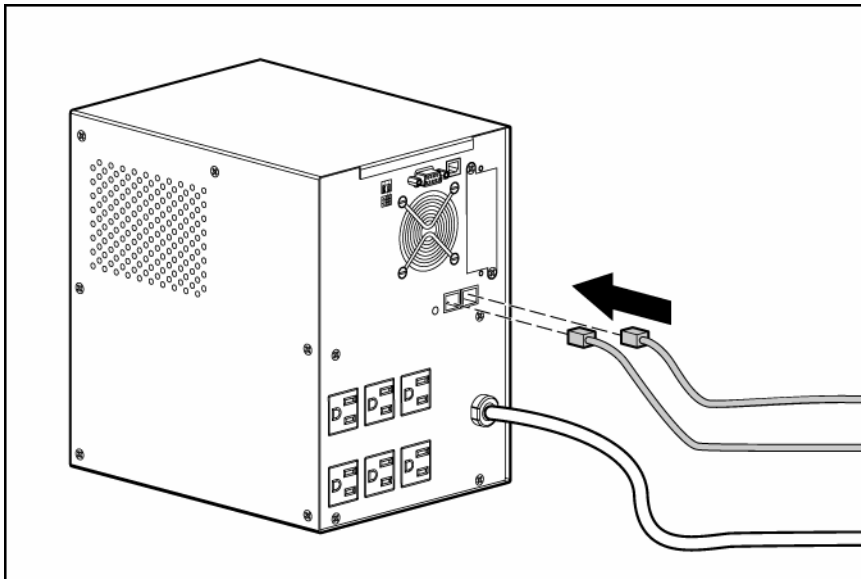


Connecting the UPS to utility power

⚠ WARNING: To prevent injury from electric shock or damage to the equipment:

- **Plug the input line cord into a grounded (earthed) electrical outlet that is installed near the equipment and is easily accessible.**
 - **Do not disable the grounding plug on the input line cord. The grounding plug is an important safety feature.**
 - **Do not use extension cords.**
1. Connect the input power cord from an intended load device to the IEC-320-C14 input power receptacle on the UPS rear panel (INTL model only).
 2. Connect the UPS power cord to a grounded utility power outlet. When the UPS is plugged in, the batteries begin to charge and the output receptacles designated for surge-only protection provide power (NA/JPN model only). Power to the output receptacles designated for surge and battery backup is not available until the unit is powered up.

Connecting devices to the UPS

 **CAUTION:** Do not plug laser printers into the UPS output receptacles designated for battery backup protection. The instantaneous current drawn by this type of printer can overload the UPS. Connect all heavy-draw devices to the output receptacles designated for surge-only protection (NA/JPN model only).


Before connecting devices, verify that the UPS will not overload by checking that the ratings of the devices do not exceed the UPS capacity. If the equipment rating is listed in amps, multiply the number of amps by 120 to determine the VA.

After verifying that the UPS will not overload:

- Connect the device power cords to the output receptacles on the rear panel of the UPS (NA/JPN model).
- or-
- Connect devices to the output receptacles on the rear panel of the UPS using the jumper cords included with the UPS (INTL model).

Charging the UPS batteries


Allow the batteries to charge before putting the UPS into service.

 **IMPORTANT:** Charge the batteries for at least 24 hours before supplying backup power to devices. The batteries charge to:

- 90% of their capacity within 4 hours
- 100% of their capacity within 24 hours

Powering up the UPS

Press and hold the Power On/Standby button (1) until the UPS beeps. The Power LED illuminates solid green, indicating that power is available at the UPS output receptacles.

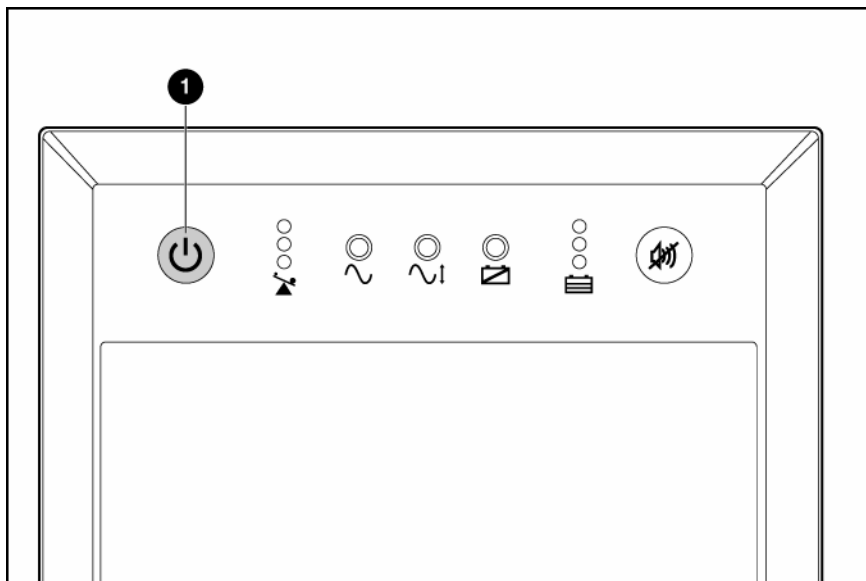


UPS operations

In this section

Initiating a self-test	16
Silencing an audible alarm.....	16
Powering down the UPS.....	16

Initiating a self-test

A self-test can be performed with equipment connected to the UPS output receptacles. To initiate a self-test, press and hold the Mute/Test button until the alarm beeps two times.

 **CAUTION:** Do not unplug the UPS to test the batteries. This action removes safe electrical grounding and can introduce a damaging surge into the network connections.

The self-test lasts approximately 10 seconds as the UPS switches to battery power to test the load capacity and battery charge. During the self-test, the Power LED flashes, the Output Load Level LED illuminates, and the Battery Charge LED illuminates.

Silencing an audible alarm

Press the Mute/Test button.



IMPORTANT:

- Although the audible alarm silences, the condition that caused the alarm to sound might still exist.
- If a utility power failure caused the alarm (the Power LED is flashing green), the alarm silences after power is restored.

Audible alarm conditions

Alarm type	Condition	Audible alarm	Can alarm be silenced?
Normal	UPS operating from utility power	No audible alarm	N/A
UPS on battery	UPS operating on battery power	On–four short beeps	Yes
Shutdown imminent	Batteries nearly out of power	On–continuous	Yes
Battery problem	Batteries must be recharged	On–intermittent beeps	Yes
Overload	UPS power capacity exceeded	On–continuous	Yes

Powering down the UPS

1. Shut down all connected load devices.
2. Press the Power On/Standby button. Power to the output receptacles ceases.
3. Disconnect the UPS from utility power.

4. Wait at least 60 seconds for the UPS internal circuitry to discharge.

Power management

In this section

HP Power Manager features	18
---------------------------------	----

HP Power Manager features

HP Power Manager software ensures maximum power reliability of computer systems through comprehensive control of UPSs. The easy-to-use browser interface enables novice users to configure and manage power protection settings. To download the latest version of HP Power Manager software, see the HP website (<http://www.hp.com/go/rackandpower>).



NOTE: To install and configure the software, see the software user guide. The software user guide is available for download from the HP website (<http://www.hp.com/go/rackandpower>).

HP Power Manager:

- Does not require complex management systems, which simplifies deployment, configuration, and management of UPS-protected environments.
- Manages a graceful shutdown of attached devices during utility power failures.
- Prioritizes the timing of attached load device shutdowns.
- Shuts down and reboots any UPS and attached load devices based on a user-specified schedule.
- Customizes alert generation with modifiable dialog boxes, command execution, and email and broadcast messages.
- Monitors the status of the UPS and reports alarms.
- Displays a power log for analysis.

Maintenance

In this section

Updating the UPS firmware	19
Cleaning battery spills	19

Updating the UPS firmware

1. Power down all equipment connected to the UPS.
2. Connect the serial cable between the UPS and the computer that will be used to update the UPS firmware. The computer must not be plugged in to the UPS and must run Microsoft® Windows® 2000, Microsoft® Windows® XP, or Microsoft® Windows® 2003.
3. Launch the firmware upgrade program.



NOTE: To download the latest version of UPS firmware, see the HP website (<http://www.hp.com/go/rackandpower>).

4. Select the COM port to be used from the drop-down list.
5. Click **Open**.
6. Click **Get UPS Version**.
7. Click **Browse** to select the firmware file (file type *.s19).
8. Click **Update**. The UPS output turns off.
9. After the upgrade completes, click **Close COM Port**.
10. Power up the UPS ("Powering up the UPS" on page 15).
11. Power up the equipment connected to the UPS.

Cleaning battery spills

1. Put on acid-resistant boots, a chemical face shield, chemical splash goggles, and acid-resistant gloves.



WARNING: Battery acid can severely damage your eyes and skin.

2. Remove combustible materials and all sources of ignition.
3. Stop the flow of material and contain or absorb small spills with dry sand, earth, or vermiculite.
4. Neutralize spilled battery acid with the special solutions contained in a spill kit or with a solution of 1 lb baking soda to 1 gallon of water.
5. Be sure the mixture is neutral, then collect the residue and place the residue in a drum or other suitable container.
6. Properly dispose of hazardous waste.



WARNING: Do not allow discharge of unneutralized acid to reach the sewer.

Troubleshooting

In this section

UPS does not start	20
Audible alarm sounds	20
UPS operates on battery only	20
UPS frequently switches between utility and battery power	21
UPS does not provide the expected backup time	21
UPS emits a slight clicking noise	21
Power LED flashes	21
Voltage Configuration LED is green	21
Output Load Level LED is red or flashing red	22
Battery Charge LED is red	22
Battery Warning LED is amber	22
Site Wiring Fault LED is red	22

UPS does not start

Action:

1. Be sure that the power cord is plugged in to a utility power receptacle.
2. Check the power source at the utility power receptacle.
3. Allow the UPS batteries to charge for 24 hours.

Audible alarm sounds

Action:

1. Identify the LED associated with the audible alarm.
2. Check the troubleshooting information in this document to determine the cause of the alarm.

UPS operates on battery only

Action:

1. Save your work.
2. Power down the load devices connected to the UPS output receptacles.
3. Remove one or more load devices to reduce the power requirements.
4. Be sure the UPS configuration matches the utility voltage. Refer to "Selecting the UPS voltage configuration (on page 11)."

UPS frequently switches between utility and battery power

Action:

1. Check the input voltage and reconfigure the UPS ("[Selecting the UPS voltage configuration](#)" on page 11).
2. Contact a qualified electrician to verify that the utility power is suitable for the UPS.

UPS does not provide the expected backup time

Action:

1. If the Output Load Level LED is red or flashing red, remove one or more load devices to reduce the power requirements.
2. Power down the UPS ("[Powering down the UPS](#)" on page 16).
3. Verify that the batteries are connected.
4. Allow the UPS batteries to charge for 24 hours.
5. Initiate a self-test ("[Initiating a self-test](#)" on page 16).
6. During extended power outages, save your work, power down the load devices, and then power down the UPS ("[Powering down the UPS](#)" on page 16) to conserve battery power.

UPS emits a slight clicking noise

Action: The UPS is automatically correcting high or low AC voltage on the utility line. No action is required.

Power LED flashes

Action:

If the Battery Charge LED is also red:

- a. Save your work, and power down the UPS ("[Powering down the UPS](#)" on page 16).
- b. After the blackout or brownout is over, power up the UPS ("[Powering up the UPS](#)" on page 15).
- c. Allow the UPS batteries to charge for 24 hours.

If the Battery Charge LED is also yellow or green:

- a. Consider saving your work and powering down the UPS (on page 16). If the blackout or brownout is prolonged, the Battery Charge LED turns red as the UPS batteries near depletion.
- b. After the blackout or brownout is over, power up the UPS ("[Powering up the UPS](#)" on page 15).
- c. Allow the UPS batteries to charge for 24 hours.

Voltage Configuration LED is green

Action: The UPS is automatically correcting high or low AC voltage on the utility line. No action is required.

Output Load Level LED is red or flashing red

Action:

1. Remove one or more load devices to reduce the power requirements.
2. Initiate a self-test ("[Initiating a self-test](#)" on page 16).
3. If the condition persists, verify that the load devices are not defective.

Battery Charge LED is red

Action:

If the Power LED is flashing green:

- a. Save your work, and power down the UPS ("[Powering down the UPS](#)" on page 16).
- b. After the blackout or brownout is over, power up the UPS ("[Powering up the UPS](#)" on page 15).
- c. Allow the UPS batteries to charge for 24 hours.

If the Power LED is green:

- a. Continue to let the batteries charge until the Battery Charge LED is green.
- b. Initiate a self-test ("[Initiating a self-test](#)" on page 16).

Battery Warning LED is amber

Action:

1. Allow the UPS batteries to charge for 24 hours.
2. Initiate a self-test ("[Initiating a self-test](#)" on page 16).

Site Wiring Fault LED is red

Action: Contact a qualified electrician to be sure that:

- The utility power receptacle is grounded.
- There is a ground wire in the UPS power cord.
- The line and neutral wires are not reversed in the wall outlet.

Specifications

In this section

UPS physical specifications.....	23
UPS input specifications	23
UPS output specifications.....	23
Battery specifications	24
Battery runtime.....	25
Environmental specifications	25

UPS physical specifications

Parameter	Value
Height	26.2 cm (10.3 in.)
Depth	20.1 cm (7.9 in.)
Width	17.0 cm (6.7 in.)
Weight	13.6 kg (30 lb)

UPS input specifications



NOTE: An asterisk (*) indicates the default setting.

UPS model	Utility voltage frequency (Hz)	Available settings utility voltage (VAC)	Branch circuit rating (A)	Line cord
T750 NA/JPN	60/50	100, 110, 120*	15	Nondetachable power cord with NEMA 5-15 plug
T750 INTL	50/60	220, 230*, 240	10	Detachable power cord with IEC-320 plug

UPS output specifications

UPS model	Output receptacles	Maximum current
T750 NA/JPN	6 x NEMA 5-15	7.5 A
T750 INTL	6 x IEC-320-C13	3.8 A

Power protection specifications

UPS model	VA	Nominal power rating (W)	Nominal voltage setting
T750 NA/JPN	750	500	100, 110, 120

UPS model	VA	Nominal power rating (W)	Nominal voltage setting
T750 INTL	750	500	220, 230, 240

Voltage specifications

Configuration setting (VAC)	Available nominal output voltage (VAC)
100	100
110	110
120	120
220	220
230	230
240	240

Output tolerance specifications

Source of power	Regulation
Utility power (nominal range)	-10% to +6% of nominal output voltage rating (within the guidelines of the Computer Business Equipment Manufacturers Association)
Battery power	±10% of nominal output voltage rating

Output feature specifications

Feature	Specification
Online efficiency	94% nominal input voltage
Voltage wave shape	Sine wave; 5% THD with typical PFC load
Surge suppression	High-energy 6500 A peak
Noise filtering	MOVs and line filter for normal and common mode use

Battery specifications

Feature	Specification
Type	Each model contains maintenance-free, sealed, valve regulated lead-acid batteries with a 3-year minimum float service life at 25°C (77°F).
Voltage	The battery modules have a battery string voltage of 24 V.
Charging	Complete charge takes no more than 24 hours. After approximately 4 hours, the batteries reach 90% charge at default nominal utility voltage and no load.

Battery runtime

Load, percent	Load, watts	Estimated battery runtime at 100% battery charge
20	100	45 minutes
50	250	15 minutes
80	400	6 minutes
100	500	4.6 minutes

Environmental specifications

Feature	Specification
Operating temperature	10°C to 40°C (50°F to 104°F); UL-tested at 25°C (77°F)
Nonoperating temperature	-25°C to 55°C (-13°F to 131°F)
Relative humidity	20% to 80%; noncondensing
Operating altitude	Up to 2,000 m (6,600 ft) above sea level
Nonoperating altitude	Up to 15,000 m (49,212 ft) above sea level
Audible noise	Less than 45 dBA, normal operation Less than 50 dBA, on battery power

Spares

In this section

Ordering spares.....	26
UPS spare parts list.....	26
Hardware options	26

Ordering spares

- To order a spare, visit the HP website (<http://h61003.www6.hp.com>).
- To replace parts under warranty, contact an HP authorized service representative.

UPS spare parts list

Item	Spare part number
UPS unit NA/JPN	379059-001
UPS unit INTL	379060-B31
Serial computer interface cable	204508-001
10 A jumper cord	142258-006

Hardware options

For information on the supported hardware options, see the HP website (<http://www.hp.com/go/rackandpower>).

Technical support

In this section

Before you contact HP.....	27
HP contact information.....	27

Before you contact HP

Be sure to have the following information available before you call HP:

- Technical support registration number (if applicable)
- Product serial number
- Product model name and number
- Applicable error messages
- Add-on boards or hardware
- Third-party hardware or software
- Operating system type and revision level

HP contact information

For the name of the nearest HP authorized reseller:

- In the United States, refer to the HP US service locator webpage (http://www.hp.com/service_locator).
- In other locations, refer to the HP website (<http://www.hp.com>).

For HP technical support:

- In North America:
 - Call 1-800-HP-INVENT (1-800-474-6836). This service is available 24 hours a day, 7 days a week. For continuous quality improvement, calls may be recorded or monitored.
 - If you have purchased a Care Pack (service upgrade), call 1-800-633-3600. For more information about Care Packs, refer to the HP website (<http://www.hp.com>).
- Outside North America, call the nearest HP Technical Support Phone Center. For telephone numbers for worldwide Technical Support Centers, refer to the HP website (<http://www.hp.com>).

Warranty information

In this section

Limited warranty	28
\$250,000 Computer Load Protection Guarantee	28
Pre-Failure Battery Warranty	28

Limited warranty

To back up the wide range of features offered with the UPS, a 3-year limited warranty is provided.

\$250,000 Computer Load Protection Guarantee

In addition to the limited warranty, a \$250,000 Computer Load Protection Guarantee (provided by the original equipment manufacturer) is offered.



IMPORTANT: The \$250,000 Computer Load Protection Guarantee is offered only in The United States and Canada.

The \$250,000 Computer Load Protection Guarantee only applies if:

- The UPS is plugged into a suitably grounded and wired outlet using no extension cords, adapters, other ground wires, or other electrical connections.
- The UPS installation complies with all applicable electrical and safety codes specified by the NEC.
- The UPS is used under normal operating conditions and users comply with all instructions and labels.
- The UPS is not damaged by accident (other than a utility power transient), misuse, or abuse.
 - The Guarantee applies only to the original end-user and is non-transferable.
 - The Guarantee does not include reimbursement for or restoration of any data loss.
- The UPS is either connected directly to an enterprise class PDU, which is then connected directly to a server, workstation, or personal computer, or the UPS is connected directly to a server, workstation, or personal computer.

Pre-Failure Battery Warranty

The Pre-Failure Battery Warranty, standard on all UPS units, extends the advantage of a 3-year limited warranty by applying it to the battery before it actually fails. The Pre-Failure Battery Warranty ensures that the battery is replaced free of charge when a notification that the battery might fail is received from power management software. The battery warranty coverage is 3 years for parts. The warranty for the first year of ownership includes parts and labor. If battery spares are not available for a particular UPS model, the entire UPS, including its battery, is replaced.

A Pre-Failure Battery warning is given 30 days before a battery failure. The warning is indicated in one or both of the following ways:

- An LED showing the battery is low

- Notification from power management software

Regulatory compliance notices

In this section

Regulatory compliance identification numbers.....	30
Federal Communications Commission notice	30
Declaration of conformity for products marked with the FCC logo, United States only.....	31
Modifications.....	32
Cables	32
Canadian notice (Avis Canadien)	32
European Union regulatory notice	32
Japanese notice	33
BSMI notice	33
Korean notice	33
Battery replacement notice	34
Power cord statement for Japan	34

Regulatory compliance identification numbers

For the purpose of regulatory compliance certifications and identification, this product has been assigned a unique regulatory model number. The regulatory model number can be found on the product nameplate label, along with all required approval markings and information. When requesting compliance information for this product, always refer to this regulatory model number. The regulatory model number is not the marketing name or model number of the product.

Federal Communications Commission notice

Part 15 of the Federal Communications Commission (FCC) Rules and Regulations has established Radio Frequency (RF) emission limits to provide an interference-free radio frequency spectrum. Many electronic devices, including computers, generate RF energy incidental to their intended function and are, therefore, covered by these rules. These rules place computers and related peripheral devices into two classes, A and B, depending upon their intended installation. Class A devices are those that may reasonably be expected to be installed in a business or commercial environment. Class B devices are those that may reasonably be expected to be installed in a residential environment (for example, personal computers). The FCC requires devices in both classes to bear a label indicating the interference potential of the device as well as additional operating instructions for the user.

FCC rating label

The FCC rating label on the device shows the classification (A or B) of the equipment. Class B devices have an FCC logo or ID on the label. Class A devices do not have an FCC logo or ID on the label. After you determine the class of the device, refer to the corresponding statement.

Class A equipment

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at personal expense.

Class B equipment

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit that is different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Declaration of conformity for products marked with the FCC logo, United States only

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For questions regarding this product, contact us by mail or telephone:

- Hewlett-Packard Company
P. O. Box 692000, Mail Stop 530113
Houston, Texas 77269-2000
- 1-800-HP-INVENT (1-800-474-6836). (For continuous quality improvement, calls may be recorded or monitored.)

For questions regarding this FCC declaration, contact us by mail or telephone:

- Hewlett-Packard Company
P. O. Box 692000, Mail Stop 510101
Houston, Texas 77269-2000
- 1-281-514-3333

To identify this product, refer to the part, series, or model number found on the product.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Hewlett-Packard Company may void the user's authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods in order to maintain compliance with FCC Rules and Regulations.

Canadian notice (Avis Canadien)

Class A equipment

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Class B equipment

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Union regulatory notice

This product complies with the following EU Directives:

- Low Voltage Directive 73/23/EEC
- EMC Directive 89/336/EEC

Compliance with these directives implies conformity to applicable harmonized European standards (European Norms) which are listed on the EU Declaration of Conformity issued by Hewlett-Packard for this product or product family.

This compliance is indicated by the following conformity marking placed on the product:



This marking is valid for non-Telecom products and EU harmonized Telecom products (e.g. Bluetooth).



This marking is valid for EU non-harmonized Telecom products.

*Notified body number (used only if applicable—refer to the product label)

Japanese notice

ご使用になっている装置にVCCIマークが付いていましたら、次の説明文をお読み下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

VCCIマークが付いていない場合には、次の点にご注意下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

BSMI notice

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Korean notice

Class A equipment

A급 기기 (업무용 정보통신기기)

이 기기는 업무용으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 만약 잘못판매 또는 구입하였을 때에는 가정용으로 교환하시기 바랍니다.

Class B equipment


B급 기기 (가정용 정보통신기기)

이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

Battery replacement notice

⚠ WARNING: Power products contain sealed lead-acid battery modules. A risk of fire and burns exists if the battery is not properly handled. To reduce the risk of personal injury:

- **Do not attempt to recharge the battery.**
- **Do not expose the battery to temperatures higher than 60°C (140°F).**
- **Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water. The battery might explode.**

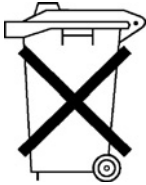

Batteries, battery packs, and accumulators should not be disposed of together with the general household waste. To forward them to recycling or proper disposal, use the public collection system or return them to HP, an authorized HP Partner, or their agents.

For more information about battery replacement or proper disposal, contact an authorized reseller or an authorized service provider.

Power cord statement for Japan

製品には、同梱された電源コードをお使い下さい。
同梱された電源コードは、他の製品では使用出来ません。

Electrostatic discharge

In this section

Preventing electrostatic discharge.....	35
Grounding methods to prevent electrostatic discharge	35

Preventing electrostatic discharge

To prevent damaging the system, be aware of the precautions you need to follow when setting up the system or handling parts. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the device.

To prevent electrostatic damage:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly.

Grounding methods to prevent electrostatic discharge

Several methods are used for grounding. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:

- Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm ± 10 percent resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
- Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
- Use conductive field service tools.
- Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an authorized reseller install the part.

For more information on static electricity or assistance with product installation, contact an authorized reseller.

Acronyms and abbreviations

IEC

International Electrotechnical Commission

LED

light-emitting diode

NEC

National Electrical Code

NEMA

National Electrical Manufacturers Association

PFC

power factor corrected

UPS

uninterruptible power system

USB

universal serial bus

Index

A

- alarm conditions 16
- alarms, silencing 16
- alarms, troubleshooting 20
- authorized reseller 27

B

- backup time, insufficient 21
- batteries, charging 14
- batteries, cleaning spills 19
- batteries, connecting 10
- batteries, runtime 25
- batteries, specifications 24
- battery cables, connecting 10
- Battery Charge LED, location 6
- Battery Charge LED, troubleshooting 22
- battery expiration date 9
- battery replacement notice 34
- Battery Warning LED, location 6
- Battery Warning LED, troubleshooting 22
- battery warranty 28
- bezel, removing 10
- BSMI notice 33
- buttons 5

C

- cables 32
- cables, battery 10
- Canadian notice 32
- charging batteries 14
- class A equipment 31
- class B equipment 31
- communications port, connecting 12
- component identification 5, 6
- configuration of system 11
- connecting devices to UPS 14
- contacting HP 27

D

- Declaration of Conformity 31
- devices, connecting 14

- diagnostics 16
- dimensions, UPS 23
- DIP switches, location 7, 8
- DIP switches, setting 11
- disposal, battery 34

E

- electrical requirements 9
- electrostatic discharge 35
- environmental specifications 25
- European Union notice 32

F

- FCC rating label 30
- Federal Communications Commission (FCC)
 - notice 30, 31, 32
- firmware, updating 19
- frequent switching between battery and utility power 21
- front bezel 5
- front panel buttons 6
- front panel components 5, 6
- front panel LEDs 6

G

- grounding methods 35

H

- hardware options 26
- HP Power Manager 18
- HP Technical Support 27

I

- input specifications 23
- installation instructions 9
- insufficient backup time 21

J

- Japanese notice 33

K

Korean notices 33

L

LEDs, testing 16
limited warranty 28
load protection guarantee 28

M

maintenance 19
modifications, FCC notice 32
Mute/Test button 6

N

network transient protectors 13

O

operations, UPS 16
optional items 26
ordering spares 26
output feature specifications 24
Output Load Level LED, location 6
Output Load Level LED, troubleshooting 22
output specifications 23
output tolerance specifications 24
overview, HP Power Manager 18

P

phone numbers 27
physical specifications 23
power cord 34
Power LED, location 6
Power LED, troubleshooting 21
power management 18
Power On/Standby button 6
power protection specifications 23
powering down 16
powering up 15
problem diagnosis 20

R

rear panel connectors 7, 8
regulatory compliance identification numbers 30
regulatory compliance notices 30, 32
required information 27
runtime specifications 25

S

safety considerations 9
serial port 12
series number 30
Site Wiring Fault LED, location 7
Site Wiring Fault LED, troubleshooting 22
software 18
spare part numbers 26
spares 26
specifications 23
static electricity 35
support 27
supported hardware 26
supported software 18

T

technical support 27
telephone numbers 27
temperature ranges (environmental) 25
testing LEDs 16
troubleshooting 20

U

updating the firmware 19
UPS does not start 20
UPS firmware, updating 19
UPS operations 16
USB connectors 13
utility power, connecting 13

V

Voltage Correction LED, location 6
Voltage Correction LED, troubleshooting 21
voltage specifications 24
voltage, configuring 11

W

warranties 28
weight, UPS 23